



# RCA RCT6773W22 Speaker Replacement

This guide will illustrate how to remove the speaker.

Written By: Kelsea Weber



## INTRODUCTION

This guide will illustrate how to remove the speaker.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Portable Soldering Iron](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Battery




- Remove the two 5mm screws from the bottom of the device using a Phillips #000 screwdriver.

## Step 2






- Place the plastic opening tool between the case and the screen.
- Slide the tool clockwise around the case until all the clips are removed.

 Do not completely separate the case from the screen because there is a wire connecting the motherboard to the speaker.






## Step 3

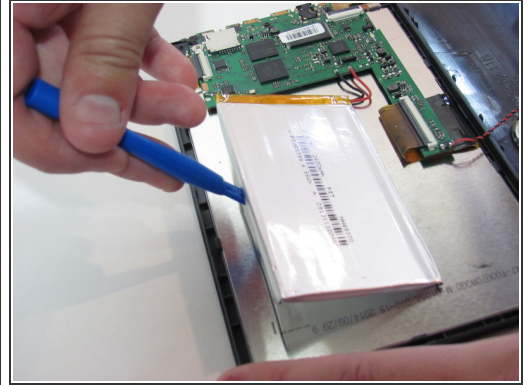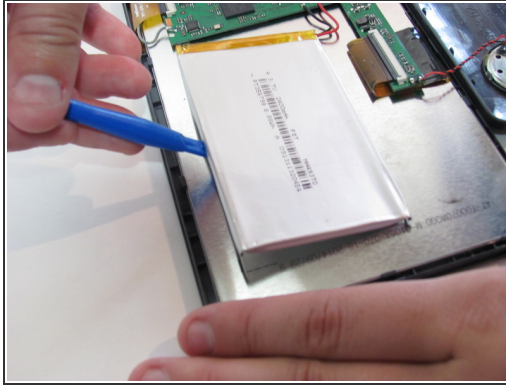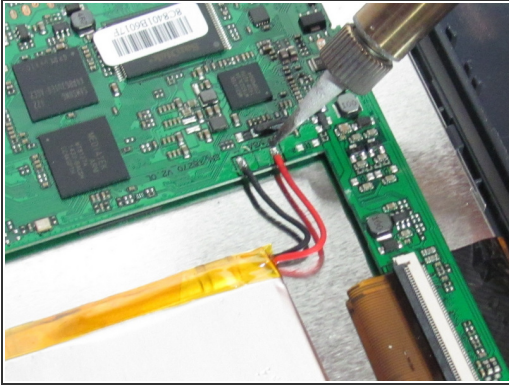

- Desolder the two wires that connect the battery to the motherboard.
- ❗ Learn more about soldering with this [soldering technique guide](#).
- Using the blue plastic opening tool, lift the battery away from the device.

## Step 4 — Speaker

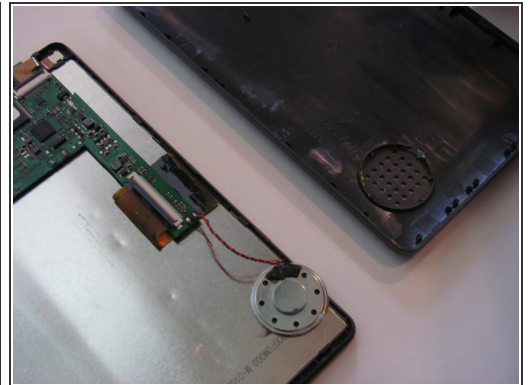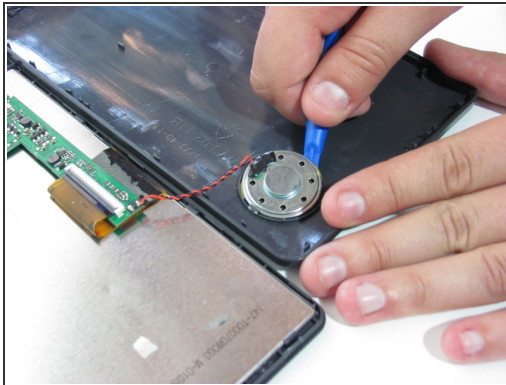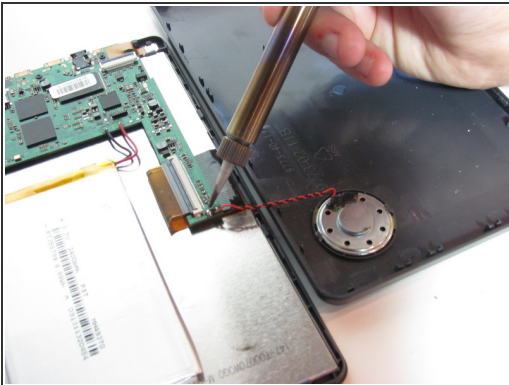

- Desolder the wire connected from the speaker to the motherboard.
- Pry the speaker from the casing with a plastic opening tool.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 11:11:31 AM.